







# USER'S GUIDE

## OUTDOOR WIRELESS BLUETOOTH SOUND BAR

### Product overview

Thank you for choosing the Bluetooth sound bar. This Bluetooth sound bar is multifunctional: Portable Bluetooth speaker, FM Radio, and MP3 player. It features a wide range volume, clear treble, strong bass, very long standby/playtime. It is great for outdoors.

Button	Icon function
	This button turns on/off the bass boost feature
	Press to switch modes
	Bluetooth mode: Press to pause/playback Radio mode: Press and hold to search/save
	Press and hold to turn down volume. Press once go back to the previous song Radio mode: Press to go back to the previous station
	Press and hold to turn volume up. Press once to go to the next song Radio mode: Press to go to the next station
	Power on/off button

 
### 1. Operation instructions

- Startup and shutdown: press (I) the power button. Press once, it will turn on. Press again, it will turn off.
- Volume adjustment: press and hold ◀ to turn up until desired volume is reached. Press and hold ▶ to turn down volume.
- Next track: Press once (without holding) ◀.
- Previous track: Press once (without holding) ▶.

### 2. Bluetooth pairing

This Bluetooth sound bar has been prepared to be paired and is waiting for connection.

- To pair with device: Place device close to sound bar at a distance not exceeding 12" (30 cm). After turning on the sound bar, turn on Bluetooth mode on device and enable search function for pairing. Select "BT SPEAKER" in search result and connect.  
Note: Recent devices will connect automatically but older devices may request a pairing code: Enter "0000H".
- Listening to music: You may control volume or track sequence from device or sound bar (as described above).
- Incoming phone calls: When receiving a call on the phone, the music/radio will stop playing and the speaker will sound the incoming call. Use the phone's calling icons to receive the call or reject it. As soon as the phone is hung up, the music will resume play.

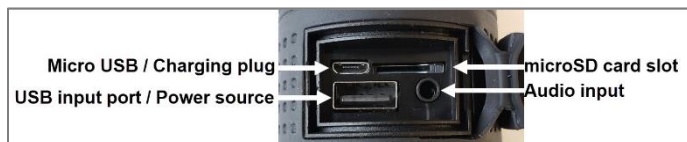

### 3. MicroSD card containing MP3 audio files

After turning on the sound bar, insert card and MP3 audio files will play automatically.

Note: It is also possible to play MP3 audio files by inserting a USB flash drive into the USB port.

### 4. Radio mode

- After turning on the sound bar, press once (without holding) M the mode button. This will enter the "reception mode" and the state indicator light will flash.
- Insert a USB cable in USB port which will be used as the antenna.
- Press and hold ▶|| to search radio stations (the state indicator light will flash while searching). The indicator light stops flashing when a station is found. Press ▶ to go back to the previous station and press ◀ to skip to the next station.



### 5. Audio Input mode: External playing device

After turning on the sound bar, press M button for a short time to access Audio input mode. Plug the 1/8" (3.5 mm) audio cable from your external playing device into the sound bar's audio input jack.

### 6. Mobile power source

A USB cable plugged into the USB port can also provide power and charging capabilities for your device.

### 7. Charge indication

This sound bar needs to be charged like any other portable device. To charge, plug cable (supplied) into the microUSB charging slot and the state indicator light will start flashing red. When the charge is complete, the light will stop flashing and remain bright red.

TECHNICAL SPECIFICATIONS	
Maximum power	3.0 W x 2
Speaker impedance	4Ω
Frequency response	100 Hz – 18 KHz
Signal-to-noise ratio	> 80 dB
Battery capacity	4000 mA
microSD card	Supports 2-32 GB card
Transmission interface	USB 2.0 full speed, FAT16/FAT32 file
Music format	MP3, WMA, WAV, FLAC, APE
Working temperature	-18°C to 40°C (0°F to 104°F)
Dimensions	156 mm x 52 mm x 52 mm
Net weight	0.5 lb (230 g)

### Package content:

- USB data cable/microUSB charging cable
- User's Guide